


# Ducati 748/916/996/998 Sequential LED Tail Light Installation Guide

## Part# D-998-C/S



1. Remove factory tail light and swap over rubber holders and connector holder to new LED tail light.

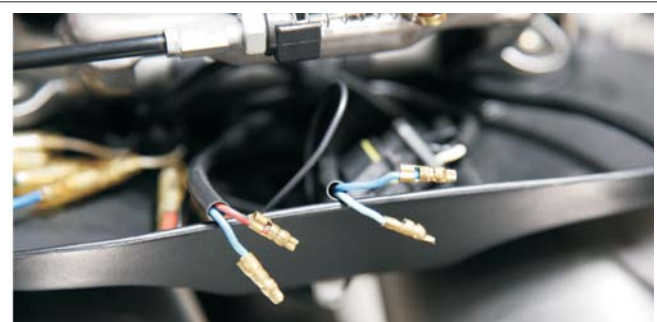


3. Disconnect the factory signal wires and remove signal lamps. They are the sleeved light blue/blue and red-black/blue wires respectively.



4. Connect other end of sub harness as follows:  
 Black - Black (any)  
 Yellow - White/Green (may differ)  
 Blue - White/Black (may differ)

### Pre-installation Checklist:

- Battery is in healthy and fully charged condition - may need engine on after installation to operate signals
- If aftermarket front LED signals are installed:
  1. Resistors must be installed on front to slow down the flash rate
- Signal must be present and flashing at the stock OEM rate prior to install

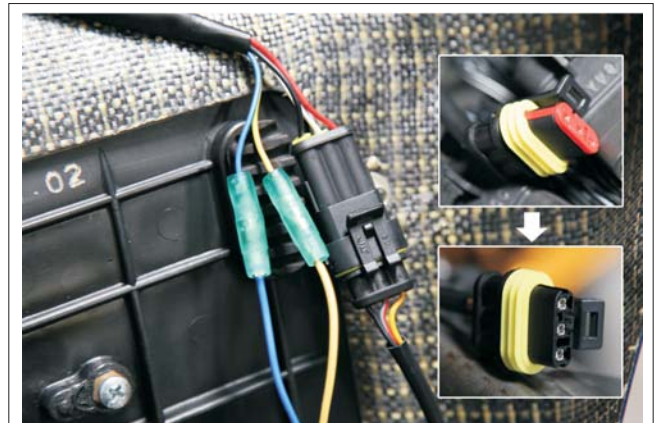

2. Connect the 3 pin main harness. Run the sub harness under the seat release and connect yellow and blue wires. Remove red cap on connector.



5. Secure sub harness with cable ties, etc and reverse procedure for reinstalling the tail lamp.

### Voltage Stabilization Kit

**Note:** Only install this if you have voltage dropping/connection issues on your brake circuit.

Symptoms include:

1. While pressing and holding front and/or rear brakes and the engine is on/idle, brakes continue to flash randomly while stop alert is enabled.
2. While pressing and holding front and/or rear brakes and engine under high RPMs, brakes continue to flash randomly while stop alert is enabled.

Use the included T-Tap connectors and wire in the voltage stabilization kit black wire to the ground wire (black) and the white wire to the brake light wire (normally white) on the tail light main harness. If symptoms continue please contact us at [sales@motodynamic.com](mailto:sales@motodynamic.com)



For programming instructions on select models please download at: [www.motodynamic.com/download](http://www.motodynamic.com/download)

\*For troubleshoot information please visit:  
<http://www.motodynamic.com/faqs>