


2015-2018 Ducati Scrambler Icon/Urban Enduro Fender Eliminator Kit

Parts List

x1 Fender eliminator assembly	x4 M6x14mm bolts
x1 License plate LED light	x2 M5x25mm bolts
x1 License plate light harness adapter	x2 M8x25mm bolts
x1 Connector plug	x4 M6 nylon lock nuts
x2 Larger plastic spacer	x2 M8 washers
x2 Small plastic spacer	x2 M5 washers
x2 Universal turn signal adapter	x4 M6 large OD washers

Recommended

Loctite or thread sealer

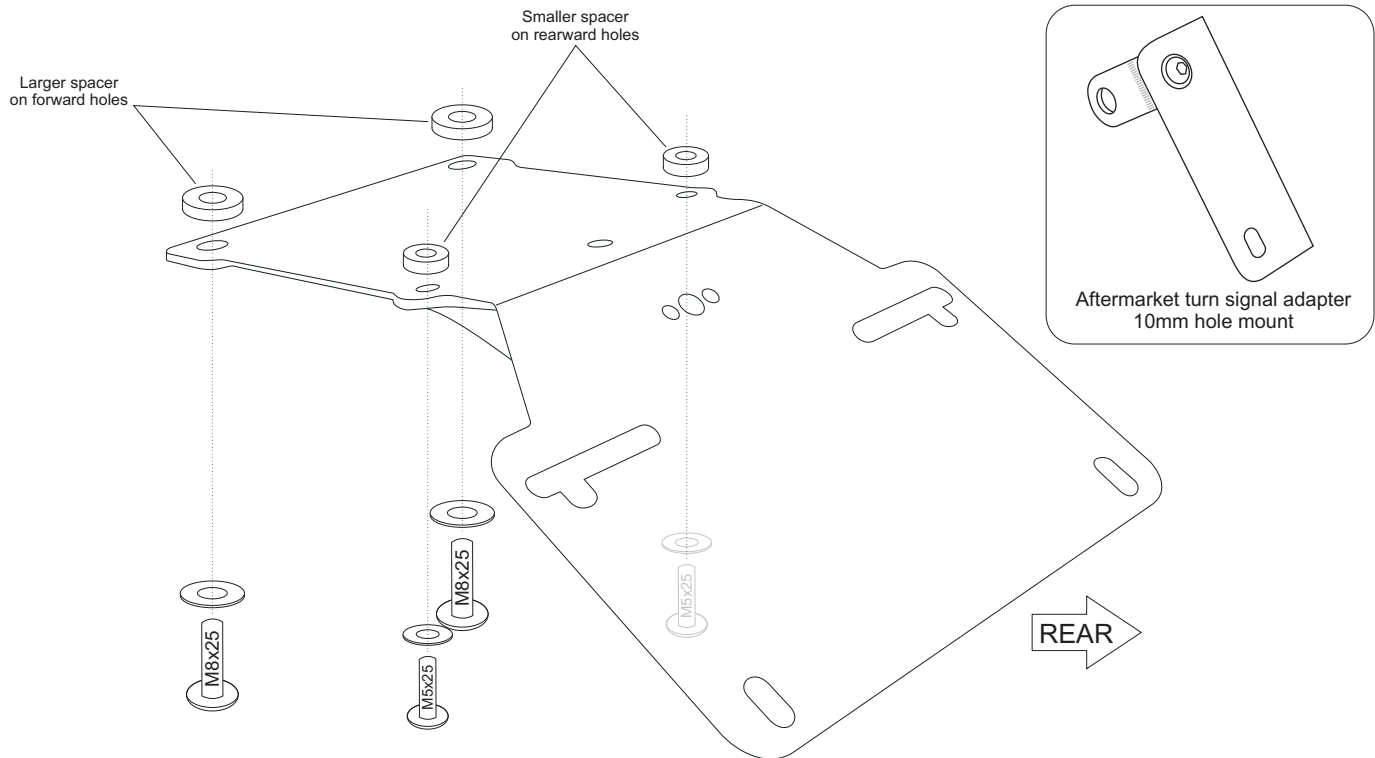

1. Remove the factory plate holder arm/assembly that is attached to the swing arm (3 bolts) and disconnect license plate light.
2. Use the included connector plug from this kit and plug off the factory license plate connector, the new LED license plate light will now draw the power from the tail light.
3. Remove the black plastic under tail and painted upper tail (4 bolts from the bottom and 1 bolt on each side)
4. Locate the tail light plug and unplug it, then plug in the license plate light adapter harness, finally plug the tail light back into the other side of the adapter harness.
5. Run the adapter harness all the way to the rear and install back the black plastic under tail and painted upper tail. Do not install the 2 under bolts on the rearmost of the black under tail. These bolts will no longer be used.
6. Mount the license plate LED light to the fender eliminator assembly and run the wire through the round center upper hole
7. Connect the license plate light to the adapter harness (white>white and black>black) while mounting the fender eliminator assembly to the black under tail using the 2 (two) M8x25 bolts and M8 washers in the forward holes and the 2 (two) M5x25 and M5 washers in the rearmost holes. Make sure to insert the larger spacer in the forward holes and smaller spacer the rearward holes between the fender eliminator assembly and the black under tail. Apply a drop of Loctite or thread sealer on these bolts. See illustration

Optional aftermarket turn signals: Mount the 2 aftermarket turn signal adapters to the fender eliminator assembly plate mount upper hole. Mount the aftermarket 10mm hole mount turn signal. Run the wires through to bike and wire it up. See illustration.