

2017-2021 Ducati Monster 1200 & SuperSport 939/950*
 2018-2021 Ducati Monster 821
 Fender Eliminator Kit

*SuperSport 950 minor filing of our turn signal bracket required to install OEM turn signals - see below

Parts List

x1 License plate holder	x1 M6 washers
x1 Cover plate	x4 M8 washers
x1 License plate LED light	x4 M6 large OD washers
x1 License plate light adapter harness	x5 M6 nylon lock nuts
x1 M6x12mm allen bolts	x4 Plastic spacers
x4 M6x16mm allen bolts	x1 OEM signal adapter kit
x4 M8x30mm allen bolts	x2 Aftermarket 10mm signal adapters

Recommended

Loctite or thread sealer

1. Remove the lower cover of the factory fender (4 bolts from underneath)
2. Undo the cable tie and unclip/unplug the left/right turn signals and license plate light connectors
3. Remove the fender (4 bolts and carefully drop it down) while feeding the wire harness through the center opening on the fender. These bolts are no longer needed. Route the harness back up through the bike leaving only the connectors exposed.
4. Mount the license plate holder to the cover plate using one (1) M6x12mm bolt, M6 washer and M6 lock nut. Make sure the cover plate is face up (foam padding facing up) and align the 2 holes before tightening
5. Attach the LED license plate light to plate holder. Feed wires through hole on plate holder. Attach adapter harness to LED plate light (Yellow>White wire and Blue>Black wire)

OPTIONAL: Connect turn signals see below




6. Having a second pair of hands help on this step. While plugging in the license plate light and optional turn signals, mount the assembly from step 4 to the bike using four (4) M8x30mm bolts, M8 washers, and plastic spacers. Apply a drop of loctite or thread sealer on these bolts. NOTE: The wider end of the cover plate tucks behind the under body panel cover of the bike.
7. Mount license plate to plate holder using four (4) M6x16mm bolts, M6 large OD washers, and lock nuts from this kit.
8. Check all lighting

Installing with factory rear turn signals

1. Remove the factory turn signals off the factory rear fender. Remove the rubber necks off the turn signals (1 bolt - retain bolt for mounting later). See illustration to right for mounting to the turn signal bracket
2. Mount the entire assembly behind the license plate holder using same holes for the license plate
3. Route the wires through the opening and plug it back into the left and right turn signal plugs. 'DX' = Right and 'SX' = Left

Installing with aftermarket 10mm hole mount turn signals

1. Mount the 2 aftermarket turn signal adapters to the license plate holder upper hole.
2. Mount the aftermarket 10mm hole mount turn signals to adapter
3. Run the wires through the square opening and wire it to the bike

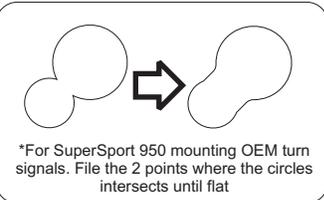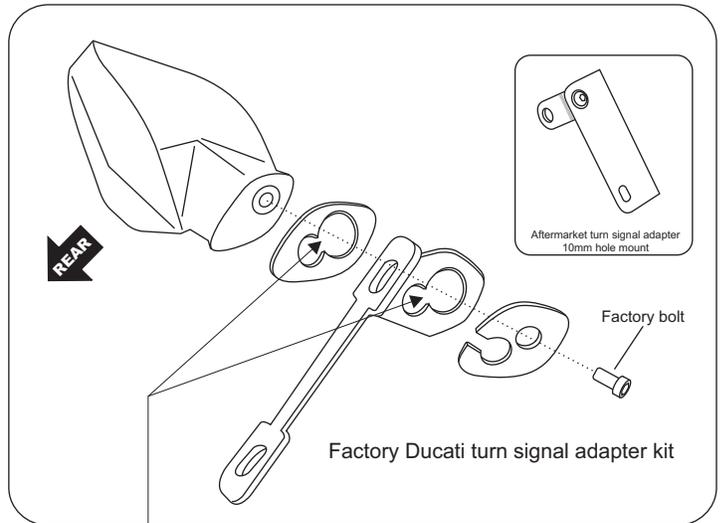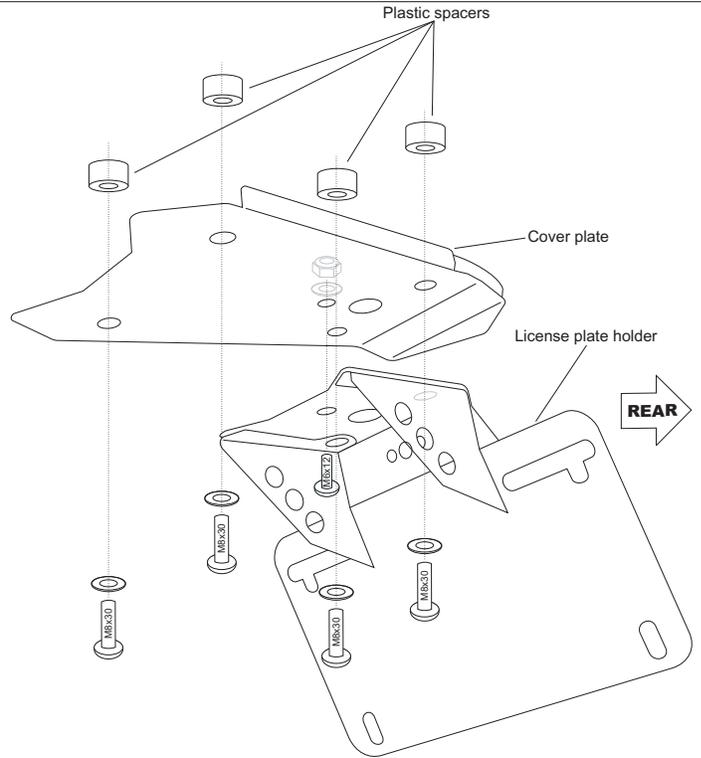

*For SuperSport 950 mounting OEM turn signals. File the 2 points where the circles intersect until flat