


# 2010-2019 BMW S1000RR Motodynamic Flush Mount LED Front Turn Signals


**WARNING: READ THESE INSTRUCTIONS BEFORE INSTALLATION**


“L” = left side turn signal  
 “R” = right side turn signal

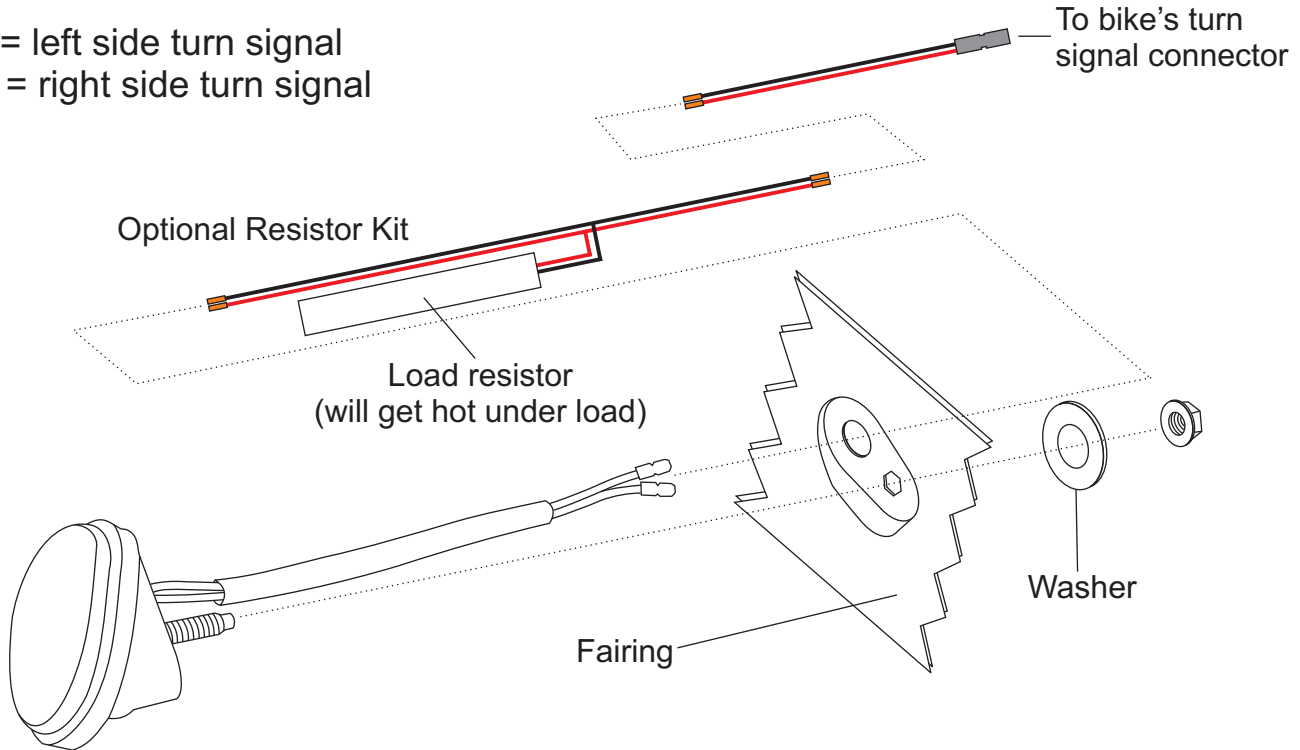

Rear Turn Signal Setup	Install Resistors?
Factory Incandescent	No
Factory BMW LED	No
Motodynamic LED In-Vent (12'-14')	No* *Some models need to install on front only
Aftermarket Non LED	No (bulb must be at least 10W)
Aftermarket LED (or Integrated LED Tail Light) <b><u>NOTE: WE CANNOT GUARANTEE COMPATIBILITY WITH AFTERMARKET LED TURN SIGNALS</u></b>	Yes - depending on the brand - first install both resistors and test for functionality, if it blinks once then stops and throws an error, remove Left resistor connect signal directly bypassing resistor, leave right side connected, test again for functionality