


Honda CBR 600RR 2007-2012

Sequential LED Tail Light Installation Guide

Part# H-7RR6-C/S

Bike Harness

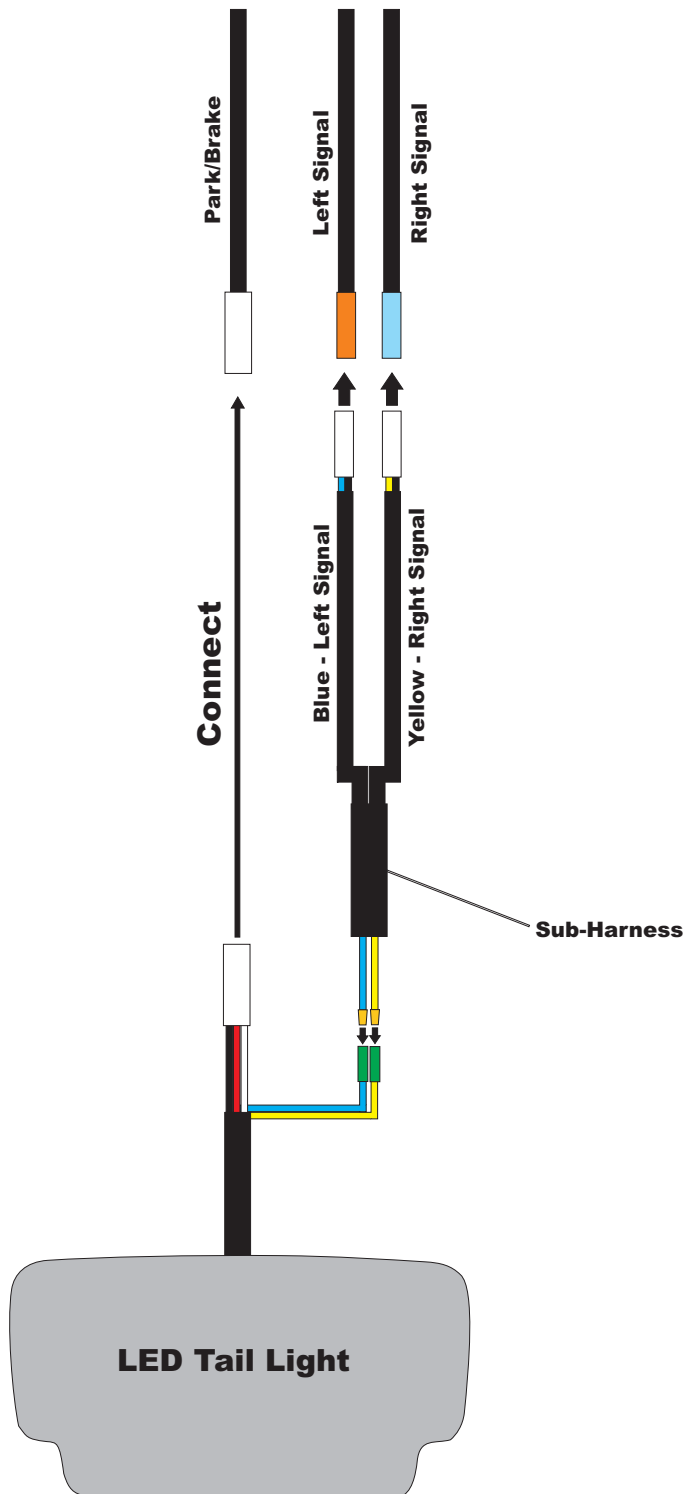

Pre-installation Checklist:

- Battery is in healthy and fully charged condition - may need engine on after installation to operate signals
- If aftermarket front LED signals are installed:
 1. Resistors must be installed on front to slow down the flash rate
 2. Disable any running/park lights if available
- Signals must be flashing at the stock OEM rate prior to install

Park/Brake:

Locate the main 3 wire harness from the bike and connect with the 3 wire connector on the LED tail light.

Sequential Signal:

Using the supplied sub-harness, connect the yellow and blue wire to the matching yellow and blue wire on the LED tail light.

Connect the opposite end of the sub-harness to the bikes factory left and right signal connectors.

Note:

Two resistors are wired inside the sub-harness. It is normal that these resistors get hot when the turn signals are activated.

*For troubleshoot information please visit:
<http://www.motodynamic.com/faqs>